

COUNTY SANITATION DISTRICTS OF LOS ANGELES COUNTY

STEAM TURBINE GENERATOR SETS FOR
COVER-GREENFIELD SLUDGE DEHYDRATION/ENERGY RECOVERY SYSTEM
AT THE JOINT WATER CONTROL PLANT
CONDENSING UNIT

OPERATION AND MAINTENANCE MANUAL VOL. 1

CONTENTS

	VOL.No.
I. CONDENSING T/G UNIT	1
1. STEAM TURBINE AND AUXILIARIES	
2. SYNCHRONOUS GENERATOR AND ACCESSORIES	
3. CONDENSER	
4. VACUUM PUMP	
II. BACK PRESSURE T/G UNIT	2
1. STEAM TURBINE AND AUXILIARIES	
2. SYNCHRONOUS GENERATOR AND ACCESSORIES	
III. ELECTRICAL EQUIPMENT	3
IV. INSTRUMENTATION	4

APRIL 1988

FUJI ELECTRIC CO., LTD.

CONTENTS (Vol. 1)

No.	Name	Drawing No.
I.	CONDENSING T/G UNIT	
1.	STEAM TURBINE AND AUXILIARIES	
2.	SYNCHRONOUS GENERATOR AND ACCESSORIES	
3.	CONDENSER	
4.	VACUUM PUMP	

CONTENTS

1. General

1.1 General description of turbine	INV-ST0111-096-E
1.2 Turbine technical data	INV-ST0111-090-E
1.3 Turbine sectional drawing	ST443017

2. Construction

2.1 Turbine

2.1.1 Journal bearing	INV-ST1421-036-E
2.1.2 Front gland packing	INV-ST1171-049-E
2.1.3 Rear gland packing	INV-ST1171-050-E
2.1.4 Control stage	INV-ST1320-027-E
2.1.5 Reaction stage	INV-ST1340-033-E
2.1.6 Low pressure stage	INV-ST1360-012-E
2.1.7 Shaft position detector and differential detector	INV-ST7122-010-E
2.1.8 Casing expansion detector	INV-ST7120-014-E

2.2 Control device

2.2.1 Turbine control devices arrangement	INV-ST2320-030a-E INV-ST2320-558-E
2.2.2 Electro-hydraulic converter	INV-ST2331-006-E INV-ST2331-509-E

2.3 Main stop valve and control valve

2.3.1 Main stop valve	INV-ST2121-008-E INV-ST2121-508-E
2.3.2 Test valve for main stop valve	INV-ST2122-002-E INV-ST2122-501-E
2.3.3 Main steam control valve	INV-ST2140-034-E INV-ST2140-535-E
2.3.4 Extraction control valve	INV-ST2140-038-E INV-ST2140-542-E
2.3.5 Servomotor for control valve	INV-ST2161-016-E INV-ST2161-518-E

2.4 Protection device

2.4.1	Protection devices and supervisory equipments	INV-ST2400-026-E
2.4.2	Emergency governor	INV-ST2420-010-E
2.4.3	Emergency trip device	INV-ST2440-005-E INV-ST2440-512a-E
2.4.4	Oil trip test device	INV-ST2421-006-E INV-ST2421-505-E
2.4.5	Vacuum tripping device	INV-ST2445-008-E
2.4.6	Solenoid trip device	INV-ST2441-008-E INV-ST2441-508-E
2.4.7	Steam strainer	INV-ST2480-001a-E INV-ST2480-501-E

2.5 Gland sealing system

2.5.1	Gland steam control system	INV-ST2371-015-E INV-ST2371-518-E
2.5.2	Construction of gland steam condenser	INV-ST5310-064-E INV-ST5310-151-E

2.6 Oil supply system

2.6.1	Main oil tank	INV-ST3110-054-E
2.6.2	Construction of oil cooler	INV-ST3170-065-E INV-ST3170-158-E
2.6.3	Transfer valve	INV-ST3171-006a-E
2.6.4	Oil damping device	INV-ST3320-001a-E
2.6.5	Lube oil throttle	INV-ST3361-002-E
2.6.6	Lube oil filter	INV-ST3311-022-E ST438528c 2/8
2.6.7	Control oil filter	INV-ST3310-007-E INV-ST3310-505a-E
2.6.8	Oil filter for E.H converter	INV-ST3310-008-E
2.6.9	Function of the accumulator	INV-ST3330-007-E INV-ST3330-006a-E
2.6.10	Accumulators	ST736249A

2.7	Extraction check valve	INV-ST8110-006-E INV-ST8110-507-E
2.8	Gear	
2.8.1	Reduction gear and rotor turning gear	INV-ST9120-009-E
2.8.2	Gear coupling	INV-ST1261-012-E
3.	Operation	
3.1	Operation references	
3.1.1	Steam purity	INV-ST0141-004-E
3.1.2	Allowable change of main steam pressure and temperature	INV-ST0142-076-E
3.1.3	Various limit values	INV-ST0140-110-E
3.1.4	Permissible rate of turbine load change	INV-ST0143-026-E
3.1.5	Permissible rate of main steam temperature change	INV-ST0144-045-E
3.1.6	Maximum allowable turbine stage pressure	INV-ST0146-100-E
3.1.7	Turbine hydraulic governing diagram	INV-ST2305-181-E
3.1.8	Turbine control system	INV-ST2312-029-E
3.1.9	Adjusting diagram for emergency governor	INV-ST2435-023-E
3.1.10	Adjusting diagram for vacuum tripping device	INV-ST2448-003-E
3.1.11	Starting and loading diagram	INV-ST0150-078-E
3.2	Starting and stopping procedure of turbine	
3.2.1	Operating sequence instruction	INV-ST0160-070-E
3.2.2	Turbine drain	INV-ST6515-012-E
3.2.3	Turbine emergency stopping procedure	INV-ST0162-039-E
3.3	Explanation of operation	
3.3.1	Permissible load and temperature change	INV-ST0170-010-E
3.3.2	Vibration	INV-ST1213-017-E
3.3.3	Turbine differential expansion	INV-ST1210-011-E

3.3.4	Frequency change	INV-ST0173-001-E
3.3.5	Prevention of reverse flow due to check valve	INV-ST8114-002-E
3.3.6	Action of extraction check valve	INV-ST8115-003-E
3.3.7	Operation of oil cooler	INV-ST3174-042-E
3.3.8	Operation of gland steam condenser	INV-ST5314-040-E
3.3.9	In case of emergency	INV-ST0196-009-E
3.4	Trouble shooting	
3.4.1	Introduction	INV-ST0106-001-E
3.4.2	Servomotor	INV-ST2164-003-E
3.4.3	Control valve	INV-ST2154-001-E
3.4.4	Shutdown regime	INV-ST0177-012-E
3.4.5	Emergency governor	INV-ST2433-001a-E
3.4.6	Emergency trip device and thrust failure protection device	INV-ST2453-003-E
3.4.7	Main stop valve	INV-ST2134-001-E
3.4.8	Steam pressure	INV-ST0175-005-E
3.4.9	Steam temperature	INV-ST0176-008-E
3.4.10	Expansion	INV-ST1115-001-E
3.4.11	Vibration	INV-ST1221-009-E
3.4.12	Oil system	INV-ST6414-017-E
3.4.13	Vacuum tripping device	INV-ST2455-001-E
3.4.14	Swing-check valve	INV-ST8116-001-E
4.	Maintenance	
4.1	General	
4.1.1	General	INV-ST0108-014-E
4.1.2	Turbine check list	INV-ST0189-031-E
4.1.3	Carrying out of test	INV-ST0107-004-E

4.1.4	Test interval	INV-ST0180-019-E
4.1.5	Inspection of oil system	INV-ST6416-012-E
4.1.6	Check list at periodical inspection	INV-ST0188-011-E
4.1.7	Maintenance at long-period shutdown	INV-ST0183-001-E
4.2	Turbine	
4.2.1	Journal bearing	INV-ST1436-037-E
4.2.2	Thrust bearing	INV-ST1456-024-E
4.2.3	Front bearing pedestal	INV-ST1416-020-E
4.2.4	Rear bearing pedestal	INV-ST1418-020-E
4.2.5	Centering of rotors	INV-ST1246-039-E
4.2.6	Control of flange bolt	INV-ST1168-048-E
4.2.7	Assembly of turbine casing	INV-ST1116-041-E
4.2.8	Change of labyrinth fin	INV-ST1188-001-E
4.2.9	Expansion detector	INV-ST7128-002-E
4.2.10	Liquid honing procedure for turbine blades	INV-ST1316-006-E
4.3	Control device	
4.3.1	Electro-hydraulic converter	INV-ST2349-004-E ST336453 ST735063
4.4	Main stop valve and control valve	
4.4.1	Main stop valve	INV-ST2139-008-E ST331036 ST716218
4.4.2	Test valve for main stop valve	INV-ST2138-003-E ST312489 ST566492
4.4.3	Steam free test of main stop valve	INV-ST2136-006-E
4.4.4	Main steam control valve	INV-ST2149-020-E ST336449 ST735059

4.4.5	Extraction control valve	INV-ST2149-038-E ST336451 ST735061
4.4.6	Gland packing for turbine main valves (Graphite packing)	INV-ST2149-016a-E
4.4.7	Servomotor for main steam control valve	INV-ST2169-031-E ST336450 ST735060
4.4.8	Servomotor for extraction control valve	INV-ST2169-032-E ST336452 ST735062
4.5	Protection device	
4.5.1	Emergency trip device	INV-ST2459-015-E ST336455 ST735065
4.5.2	Emergency governor (Over speed)	INV-ST2439-001-E ST442119 ST735066
4.5.3	Principle and adjustment of emergency governor (Over speed)	INV-ST2439-003-E
4.5.4	Oil trip test device	INV-ST2438-005-E ST331051 ST716237
4.5.5	Vacuum tripping device	INV-ST2455-003-E ST331218 ST717267
4.5.6	Solenoid trip device	INV-ST2458-016-E ST445082
4.5.7	Steam strainer	INV-ST2489-002-E ST331219
4.6	Maintenance of gland steam condenser	INV-ST3178-047-E
4.7	Oil supply system	
4.7.1	Main oil pump Emergency oil pump	INV-ST3230-024a-E ST730139A ST730140A
4.7.2	Maintenance of oil cooler	INV-ST3178-047-E
4.7.3	Ajustment of lubricating oil system	INV-ST6417-021-E
4.7.4	Oil purifier	INV-ST3180-033a-E ST726573 5/8

4.8 Extraction check valve

4.8.1 Extraction check valve (Bleed)

INV-ST8119-009-E

4.8.2 Steam free test of extraction steam
check valve

INV-ST8117-006-E

4.9 Piping and instrumentation diagram
(Lube and control oil)
(Gland steam for turbine)

ST207591G

ST334991D