

COUNTY SANITATION DISTRICTS OF LOS ANGELES COUNTY

STEAM TURBINE GENERATOR SETS FOR
COVER-GREENFIELD SLUDGE DEHYDRATION/ENERGY RECOVERY SYSTEM
AT THE JOINT WATER CONTROL PLANT
BACKPRESSURE UNIT

OPERATION AND MAINTENANCE MANUAL VOL. 2

CONTENTS

	VOL.No.
I. CONDENSING T/G UNIT	1
1. STEAM TURBINE AND AUXILIARIES	
2. SYNCHRONOUS GENERATOR AND ACCESSORIES	
3. CONDENSER	
4. VACUUM PUMP	
II. BACK PRESSURE T/G UNIT	2
1. STEAM TURBINE AND AUXILIARIES	
2. SYNCHRONOUS GENERATOR AND ACCESSORIES	
III. ELECTRICAL EQUIPMENT	3
IV. INSTRUMENTATION	4

APRIL 1988

FUJI ELECTRIC CO., LTD.

CONTENTS (Vol. 2)

No.	Name	Drawing No.
II. BACK PRESSURE T/G UNIT		
1.	STEAM TURBINE AND AUXILIARIES	
2.	SYNCHRONOUS GENERATOR AND ACCESSORIES	

CONTENTS

1. General

1.1 General description of turbine	INV-ST0111-097-E
1.2 Turbine technical data	INV-ST0110-105-E
1.3 Turbine sectional drawing	ST443018

2. Construction

2.1 Turbine

2.1.1 Journal bearing	INV-ST1421-036-E
2.1.2 Front gland packing	INV-ST1171-035-E
2.1.3 Rear gland packing	INV-ST1171-036-E
2.1.4 Control stage	INV-ST1320-004-E
2.1.5 Reaction stage	INV-ST1340-033-E
2.1.6 Shaft position detector and differential detector	INV-ST7122-007-E
2.1.7 Casing expansion detector	INV-ST7120-012-E

2.2 Control device

2.2.1 Turbine control devices arrangement	INV-ST2320-030a-E INV-ST2320-559-E
2.2.2 Electro-hydraulic converter	INV-ST2331-006-E INV-ST2331-509-E

2.3 Main stop valve and control valve

2.3.1 Main stop valve	INV-ST2121-008-E INV-ST2121-508-E
2.3.2 Test valve for main stop valve	INV-ST2122-002-E INV-ST2122-501-E
2.3.3 Main steam control valve	INV-ST2140-041-E INV-ST2140-546-E
2.3.4 Servomotor for control valve	INV-ST2161-016-E INV-ST2161-518-E

2.4	Protection device	
2.4.1	Protection devices and supervisory equipments	INV-ST2400-027-E
2.4.2	Emergency governor	INV-ST2420-010-E
2.4.3	Emergency trip device	INV-ST2440-022-E INV-ST2440-515-E
2.4.4	Oil trip test device	INV-ST2421-006-E INV-ST2421-505-E
2.4.5	Solenoid trip device	INV-ST2441-008-E INV-ST2441-508-E
2.4.6	Steam strainer	INV-ST2480-001a-E INV-ST2480-501-E
2.5	Gland sealing system	
2.5.1	Construction of gland steam condenser	INV-ST5310-065-E INV-ST5310-152-E
2.6	Oil supply system	
2.6.1	Main oil tank	INV-ST3110-054-E
2.6.2	Construction of oil cooler	INV-ST3170-065-E INV-ST3170-158-E
2.6.3	Transfer valve	INV-ST3171-006a-E
2.6.4	Oil damping device	INV-ST3320-001a-E
2.6.5	Lube oil throttle	INV-ST3361-002-E
2.6.6	Lube oil filter	INV-ST3311-022-E ST438530c 2/7
2.6.7	Control oil filter	INV-ST3310-007-E INV-ST3310-505a-E
2.6.8	Oil filter for E.H converter	INV-ST3310-008-E
2.6.9	Function of the accumulator	INV-ST3330-007-E INV-ST3330-006a-E
2.6.10	Accumulators	ST736249A

2.7	Gear	
2.7.1	Reduction gear and rotor turning gear	INV-ST9120-010-E
2.7.2	Gear coupling	INV-ST1261-013-E
3.	Operation	
3.1	Operation references	
3.1.1	Steam purity	INV-ST0141-004-E
3.1.2	Allowable change of main steam pressure and temperature	INV-ST0142-076-E
3.1.3	Various limit values	INV-ST0140-111-E
3.1.4	Permissible rate of turbine load change	INV-ST0143-036-E
3.1.5	Permissible rate of main steam temperature change	INV-ST0144-045-E
3.1.6	Maximum allowable turbine stage pressure	INV-ST0146-101-E
3.1.7	Turbine hydraulic governing diagram	INV-ST2305-182-E
3.1.8	Turbine control system	INV-ST2310-014-E
3.1.9	Adjusting diagram for emergency governor	INV-ST2425-022-E
3.1.10	Starting and loading diagram	INV-ST0150-079-E
3.2	Starting and stopping procedure of turbine	
3.2.1	Operating sequence instruction	INV-ST0160-073-E
3.2.2	Turbine drain	INV-ST6515-012-E
3.2.3	Turbine emergency stopping procedure	INV-ST0162-039-E
3.3	Explanation of operation	
3.3.1	Permissible load and temperature change	INV-ST0170-010-E
3.3.2	Vibration	INV-ST1213-017-E
3.3.3	Turbine differential expansion	INV-ST1210-011-E

3.3.4	Frequency change	INV-ST0173-012-E
3.3.5	Changeover to main oil pump	INV-ST3215-005-E
3.3.6	Operation of oil cooler	INV-ST3174-043-E
3.3.7	Operation of gland steam condenser	INV-ST5314-040-E
3.3.8	In case of emergency	INV-ST0196-009-E
3.4	Trouble shooting	
3.4.1	Introduction	INV-ST0106-001-E
3.4.2	Servomotor	INV-ST2164-003-E
3.4.3	Control valve	INV-ST2154-001-E
3.4.4	Shutdown regime	INV-ST0177-012-E
3.4.5	Emergency governor	INV-ST2433-001a-E
3.4.6	Emergency trip device and thrust failure protection device	INV-ST2453-003-E
3.4.7	Main stop valve	INV-ST2134-001-E
3.4.8	Steam pressure	INV-ST0175-005-E
3.4.9	Steam temperature	INV-ST0176-008-E
3.4.10	Expansion	INV-ST1115-001-E
3.4.11	Vibration	INV-ST1221-009-E
3.4.12	Oil system	INV-ST6414-017-E
4.	Maintenance	
4.1	General	
4.1.1	General	INV-ST0108-014-E
4.1.2	Turbine check list	INV-ST0189-013-E
4.1.3	Carrying out of test	INV-ST0107-004-E
4.1.4	Test interval	INV-ST0180-020-E
4.1.5	Inspection of oil system	INV-ST6416-012-E
4.1.6	Check list at periodical inspection	INV-ST0188-011-E
4.1.7	Maintenance at long-period shutdown	INV-ST0183-018-E

4.2 Turbine

4.2.1	Journal bearing	INV-ST1436-037-E
4.2.2	Thrust bearing	INV-ST1456-028-E
4.2.3	Front bearing pedestal	INV-ST1416-019-E
4.2.4	Rear bearing pedestal	INV-ST1418-019-E
4.2.5	Centering of rotors	INV-ST1246-038-E
4.2.6	Control of flange bolt	INV-ST1168-047-E
4.2.7	Assembly of turbine casing	INV-ST1116-040-E
4.2.8	Change of labyrinth fin	INV-ST1188-001-E
4.2.9	Expansion detector	INV-ST7128-002-E
4.2.10	Liquid honing procedure for turbine blades	INV-ST1316-006-E

4.3 Control device

4.3.1	Electro-hydraulic converter	INV-ST2349-004-E ST336459 ST735069
-------	-----------------------------	--

4.4 Main stop valve and control valve

4.4.1	Main stop valve	INV-ST2139-008-E ST331036 ST716218
4.4.2	Test valve for main stop valve	INV-ST2138-003-E ST312489 ST566492
4.4.3	Steam free test of main stop valve	INV-ST2136-006-E
4.4.4	Main steam control valve	INV-ST2149-033-E ST336457 ST735067
4.4.5	Gland packing for turbine main valves (Graphite packing)	INV-ST2149-016a-E
4.4.6	Servomotor for main steam control valve	INV-ST2169-033-E ST336458 ST735068

4.5	Protection device	
4.5.1	Emergency trip device	INV-ST2459-016-E ST336460 ST735070
4.5.2	Emergency governor (Over speed)	INV-ST2439-001-E ST336456 ST735044
4.5.3	Principle and adjustment of emergency governor (Over speed)	INV-ST2439-003-E
4.5.4	Oil trip test device	INV-ST2438-005-E ST331051 ST716237
4.5.5	Solenoid trip device	INV-ST2458-016-E ST445082
4.5.6	Steam strainer	INV-ST2489-002-E ST331219
4.6	Gland sealing system	
4.6.1	Maintenance of gland steam condenser	INV-ST3178-047-E
4.7	Oil supply system	
4.7.1	Main oil pump Emergency oil pump	INV-ST3230-024a-E ST730141A ST730142A
4.7.2	Maintenance of oil cooler	INV-ST3178-047-E
4.7.3	Ajustment of lubricating oil system	INV-ST6417-022-E
4.7.4	Oil purifier	INV-ST3180-033a-E ST726574 5/8
4.8	Piping and instrumentation diagram (Lube and control oil) (Gland steam for turbine)	ST207592F ST334992D