


A large industrial machine, likely a Buhler MicroMedia, is shown in a factory setting. The machine is white and yellow, with various pipes and hoses connected to it. A large yellow tank is visible in the background. The machine has a control panel with a screen and buttons. The image is overlaid with a semi-transparent yellow and green circular graphic.

MicroMedia.
**Quality meets
efficiency.**

High-performance bead mill MicroMedia. **Powerful true-grinding and dispersing.**

Are you looking for higher production capacities, better energy efficiency or the next quality level of your product? Then join the large number of users, no matter if small or large scale, and experience the new dimension in wet grinding and dispersing.

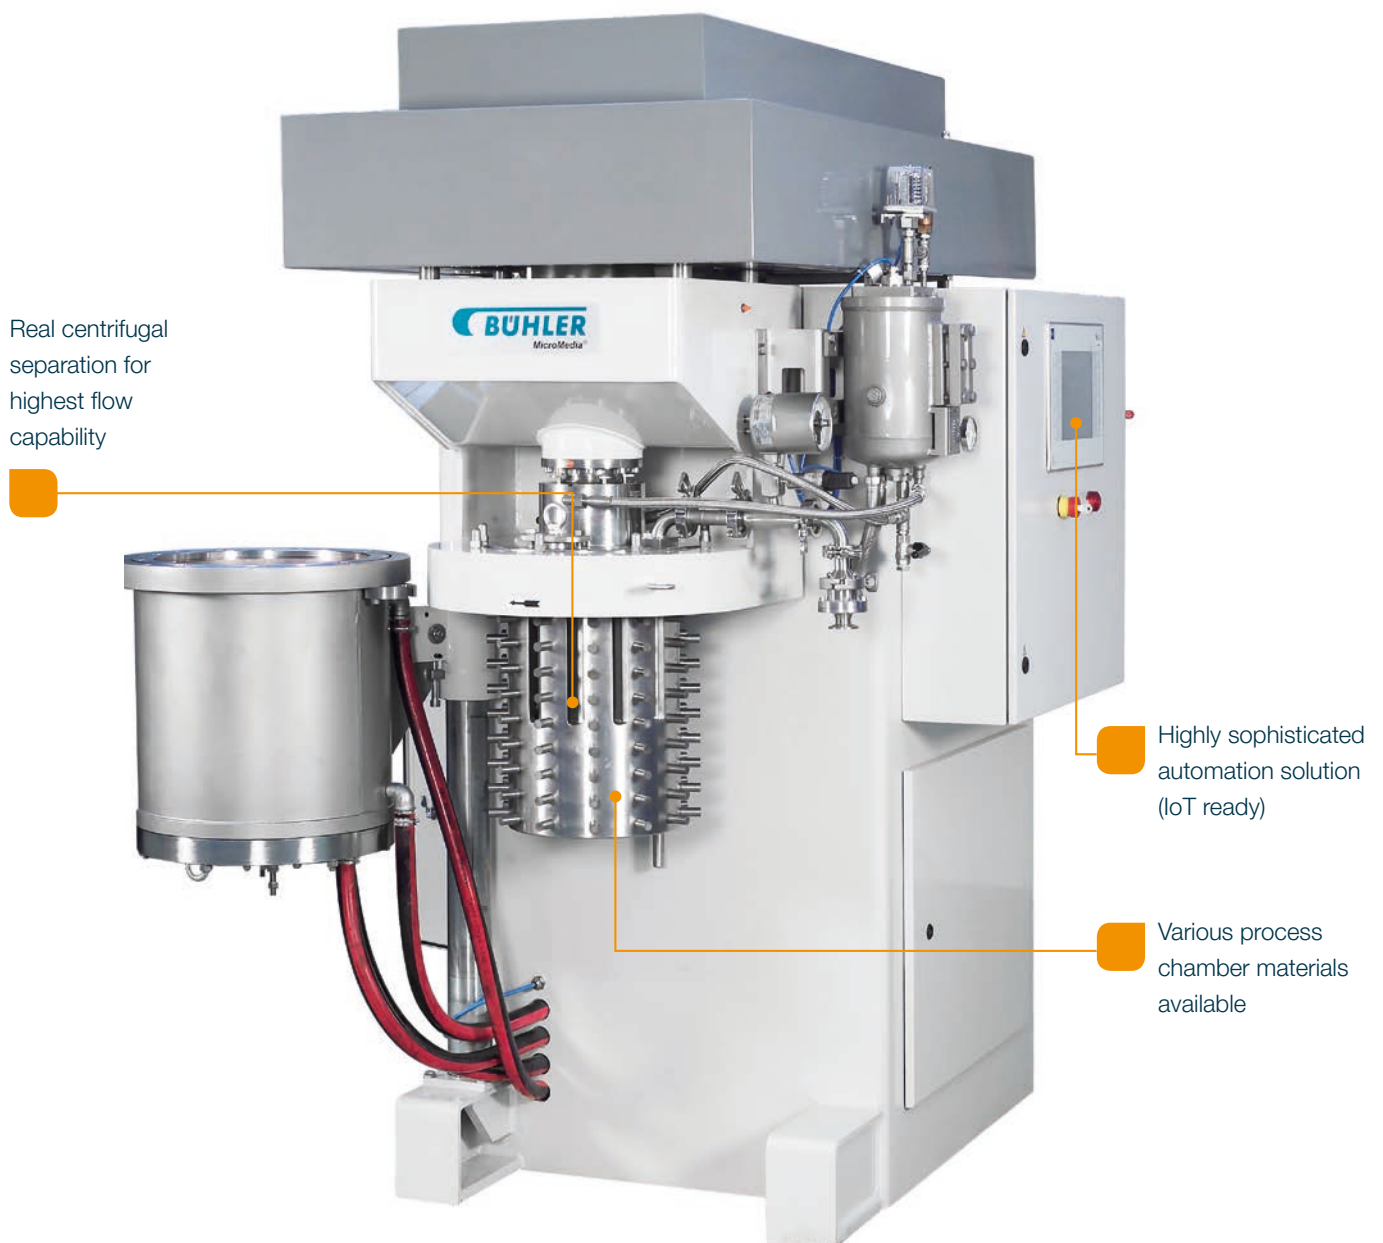

Elaborate process technology.

Flexible use for various applications.



Liquid packaging inks



Inkjet inks



High-performance coatings

MicroMedia allows an extremely wide parameter range regarding power density, flow rate and bead sizes. In combination with the available material portfolio, the technology fits to almost any application in the wet grinding and dispersing industry.

Liquid packaging inks

With MicroMedia, Bühler sets new standards in the production of liquid packaging inks. Thanks to the high flow capability, a narrow particle size distribution can be achieved with minimum energy consumption. This leads to an improved color strength, transparency and gloss.

Inkjet inks

The use of small beads in the field of inkjet inks requires an optimal bead separation to maintain high recirculation flow

rates. All of the components in the MicroMedia are finely tuned making handling of the micro beads effortless.


High-performance coatings

The wide parameter range of the MicroMedia allows an ideal adaption to the specific grinding requirements of different coatings. Additionally, Bühler's highly sophisticated automation solutions result in high process reliability and traceability.

Benefits


- Cutting edge technology for better product quality
- Maximum energy efficiency due to smaller beads and highest power density
- Wide range of process chamber materials tailored to your needs

Functional principle of MicroMedia. **Patented technology for better product quality.**

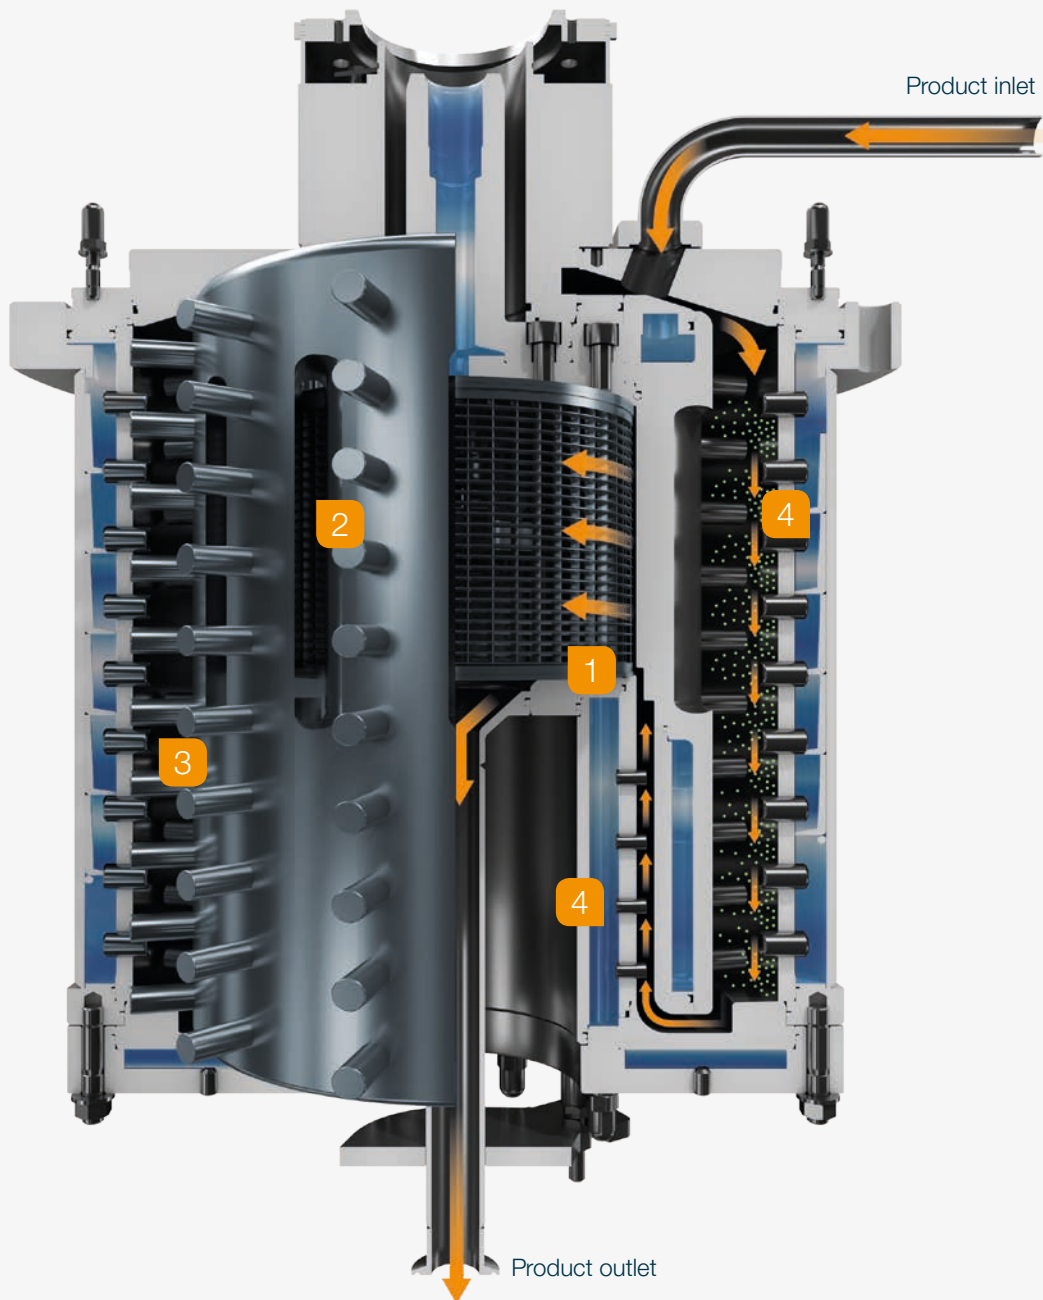

- | | |
|--|---|
| 1 Screen (maximized size for highest flow capability) | 3 Pin/counter pin (efficient activation of grinding beads) |
| 2 Slots (real centrifugal bead separation) | 4 Cooling |

Compact design saves space/maximizes efficiency. **Cutting-edge processing solutions.**

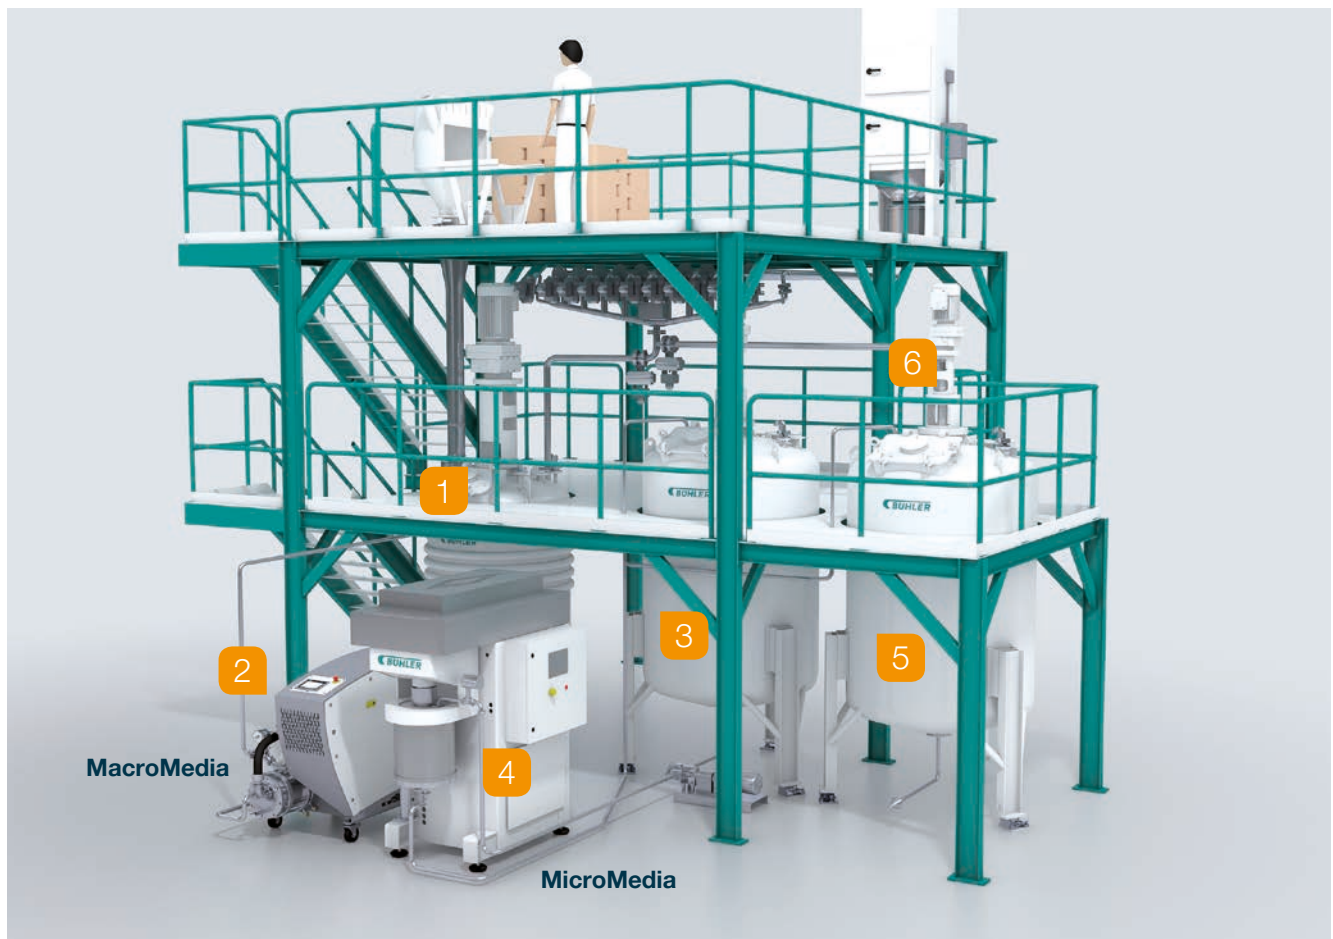

- 1 Dosing of solid and liquid materials in the mixing tanks
- 2 Circulation between MacroMedia and the mixing tank
- 3 Transfer from the mixing tank to the recirculation tank via MacroMedia
- 4 Circulation between MicroMedia and the recirculation tank
- 5 Transfer from the recirculation tank to the let-down tank via MicroMedia
- 6 Addition of liquid components and transfer to the next production step

Process and plant engineering by Bühler

- Maximum availability, reliability and cost efficiency
- Supply of complete solutions
- Installation and commissioning worldwide
- Full support throughout the entire lifecycle of a plant

Examples from industrial practice.

Optimizations thanks to MicroMedia.



Liquid packaging inks: Increased productivity

Significantly increased productivity by changing the bead mill type.

Previous process

- Fine grinding using the SuperFlow bead mill with a bead size of 0.8 mm and a gap size of 0.35 mm.
- Specific energy consumption for production: 350 kWh/t for a fineness of $<5\text{ }\mu\text{m}$

Benefits of production with smaller beads in the MicroMedia

- Fine grinding using MicroMedia with a bead size of 0.3 mm
- Specific energy consumption is reduced to 200 kWh/t while plant capacity is increased by 75 % with no change in the quality level



Inkjet inks: Increased efficiency

Smaller beads reduce the energy consumption by 40 % for digital textile inks.

Previous process

- Fine grinding using MicroMedia with a bead size of 0.3 mm
- Specific energy consumption: 2500 kWh/t

Benefits of optimized production

- Reduction of bead size to 0.1 mm while maintaining recirculation flow rates
- Specific energy consumption is reduced by 40 % to 1500 kWh/t



High-performance coatings: Increased product quality

Setting up a completely new production concept for automotive coatings.

Previous process

- Two pass operation on SuperFlow
- Production capacity of 120 kg/h


Benefits of production with integrated MicroMedia

- Switch to recirculation operation using MicroMedia
- Maximized recirculation flow rate up to 2500 kg/h resulting in a more narrow particle size distribution
- Increase of production capacity to 150 kg/h


Technical data MicroMedia

Laboratory and production mills.

Type L (Laboratory)

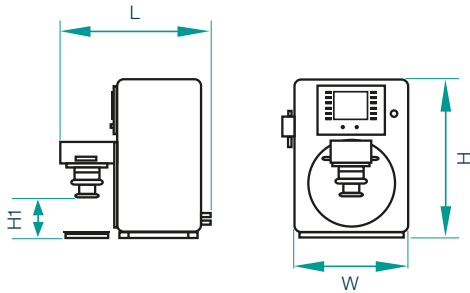

Type X1 – X4 (Production)

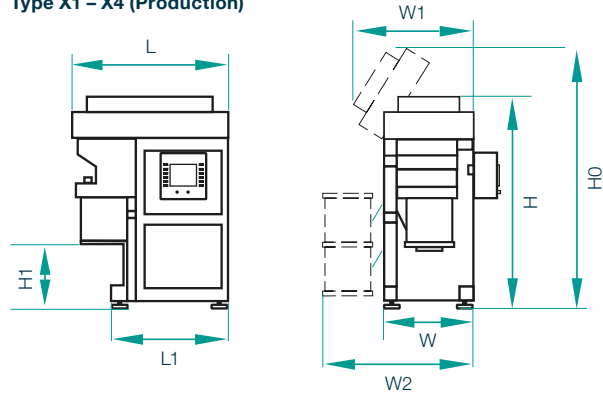

MicroMedia ¹⁾		L	X1	X2 ²⁾	X3 ²⁾	X4
Drive [kW]		2.2*	5.5	22-63	22-63	90
Active volume of process chamber [l]		0.07 (70 cm ³)	1.4	7.6	15.6	30.6
Bead separation	centrifugally with following protective screen	●	●	●	●	●
Applicable diameter of beads [µm]		20–300	20-800	20-800	20-800	20-800
Flow rate [l/h] up to	depending on viscosity, material and diameter of beads and pump, e.g.	10	400	3000	4000	8000
Cooling	outer stator	●	●	●	●	●
	bottom of stator	–	–	●	●	●
	inner stator	–	●	●	●	●
	rotor (DraisResist™)	–	–	●	●	●
Material rotor	DraisResist™	●	●	●	●	●
	Polyamid	–	●	●	●	●
	Ceramic SSiC	●	●	●	●	–
	Ceramic ZrO ₂	●	–	–	–	–
Material stator	DraisResist™	●	●	●	●	●
	Ceramic SSiC	●	●	●	●	●
	Ceramic ZrO ₂	●	–	–	–	–
Lifting device for grinding vessel	hydraulic hand pump	–	●	–	–	–
	hydraulic foot pump	–	–	●	●	●
Dimensions [mm]	H	862	920	2110	2110	2,860
	H0	–	1240	2560	2560	3430
	H1	206	270	680	680	870
	L	756	825	1550	1550	1940
	L1	–	620	1200	1200	1380
	W	617	480	857	857	1050
	W1	–	650	1123	1123	1460
	W2	–	750	1420	1420	1720
Weight [kg]		150	270	1640	1850	3420

● = Standard, – = not available, All data are approximate. Technical alterations reserved.

* = drive platform PML 2 – installed power not equivalent with power to be introduced into MicroMedia L;

¹⁾internationally patented, e. g. EP 1 943 022 B1 (2010), EP 1 992 412 B1 (2010) ²⁾Also available on the MicroMedia+ platform.

Bühler AG

CH-9240 Uzwil
Switzerland

T +41 71 955 11 11
F +41 71 955 31 49

grinding.dispersing@buhlergroup.com
buhlergroup.com

191018_MicroMedia_EN_A4